


Town & Country


VEHICLE SEAT COVERS

TA3716 Fitting Guide


1 Remove headrests and place cover over the seat backrest. *Caution, the headrest stalks can be coated with grease.*

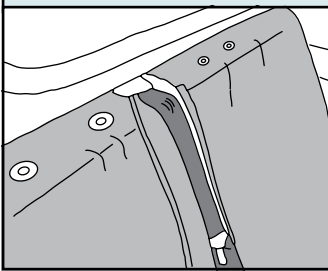


2 Align headrest plastic insertion points with the holes in the seat cover.

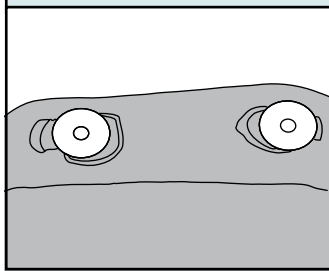


3 Pull the backrest forward and fasten the corresponding Velcro together.

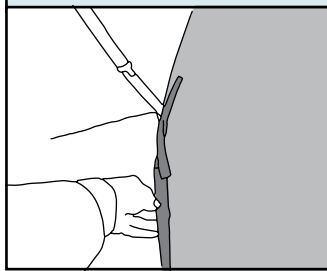


4 Pull seatbelt socket through slit where the base meets the back of the cover.

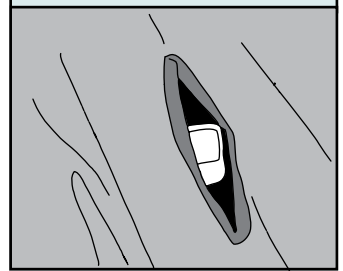



5 Pull tight and fasten central Velcro from top to bottom, keeping it as equal and square as possible.

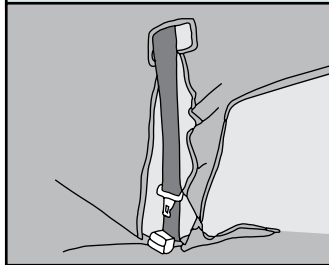

6 Pull the base part of the cover over both corner edges of the seat base and fasten base Velcro strips together behind.

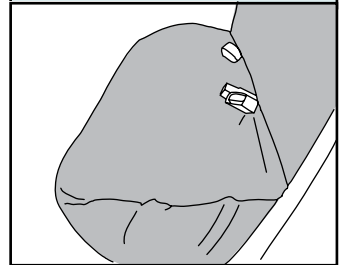

7 Slide central armrest covers over and fasten Velcro together.

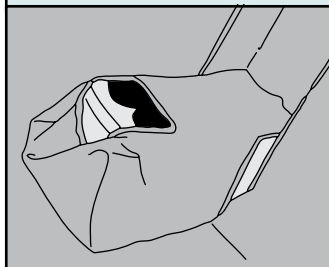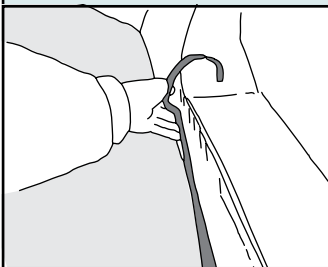

8 Attach headrest cover and reattach to the seat.

